

Magnetic Concepts Corp.

Since 1989

© Magnetic Concepts Corp., 2007


Magnetic Whiteboards

Rol-a-charts®

Electronic Print Boards

Magnetic Accessories

Standing Board Leg Assembly

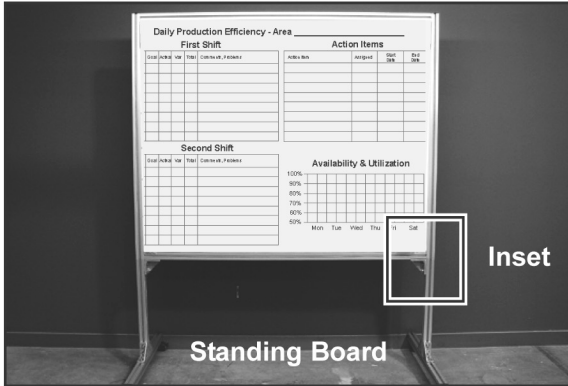

Parts Supplied:


- 2 Legs
- 2 Angle Brackets
- 8 T-Bolts and Nuts
- 1 4mm Hex Key (Allen Wrench)

Tool Required:

- 13mm Box or Socket ⑤
- Wrench

Lower corner of Standing Board

Upper portion of Leg Assembly

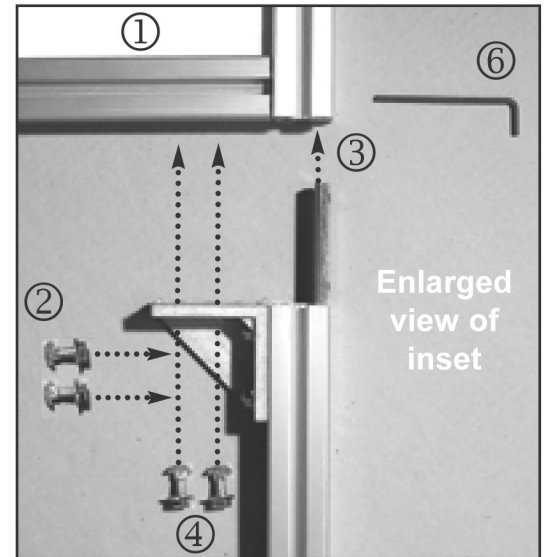

Instructions:

1. Lay standing board unit on a large flat elevated surface with graphics side facing up.
2. Insert T-Bolts (2) through holes in Angle Bracket and into Leg frame slot. Make sure nut is flush with end of bolt. Tightening nut will rotate T-Bolt 1/4 turn locking it into proper position for assembly.
3. Insert T-Bar end (male) of Leg Assembly into T-Slot of board frame.
4. Insert T-Bolts (2) through holes in Leg Assembly gusset and into frame slot. Make sure nut is flush with end of bolt. Tightening nut will rotate T-Bolt 1/4 turn locking it into proper position for assembly. (Line on end of T-Bolt is perpendicular to slot when in proper position.)
5. Using your 13mm wrench, tighten each nut until resistance is felt, then tighten about 1/3 turn to secure in place.
6. With the 4mm hex key wrench, turn M8 set screw in side of T-Bar until resistance is felt, then tighten about 1/4 turn to secure.
7. Repeat assembly for second leg.

Additional Supplies Part Numbers:

Whiteboard Accessory Kit
90437

Dry-Erase Markers
90431 (wide)

Whiteboard Cleaner
90436

Magnetic Eraser
90435

611 3rd Avenue SW Carmel, IN 46032 (800) 334-4245 (317) 580-4020
web www.bigboards.com email sales@magneticconcepts.com fax (317) 580-4024