

ce 1989 © Magnetic Concepts Corp., 2007


Magnetic Whiteboards

Rol-a-charts®

Electronic Print Boards

Magnetic Accessories

Off-the-Leg Chalktray Assembly

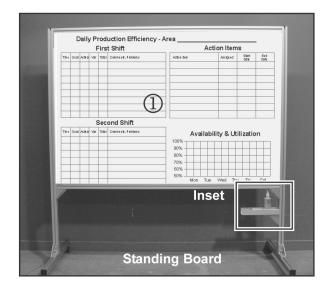

Parts Supplied:


- 1 Short Chalktray Assembly
- 1 Angle Bracket
- 2 T-Bolts and Nuts

Tool Required:

13mm Box or Socket Wrench



Right side of Standing Board shown (can also be attached to left side)

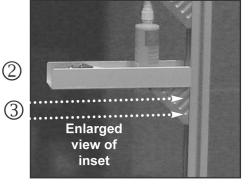

Instructions:

- 1. Face the front of the standing board.
- 2. Position chalktray assembly at desired height on inside of leg frame.
- 3. Insert two T-Bolts through holes in Angle Bracket and into leg frame slot. Make sure nut is flush with end of bolt. Tightening nut will rotate T-Bolt 1/4 turn locking it into proper position for assembly. (Line on end of T-Bolt is perpendicular to slot when in proper position.)
- 4. Using your 13mm wrench, tighten each nut until resistance is felt, then tighten about 1/3 turn to secure in place.

Additional Supplies Part Numbers:

Whiteboard Accessory Kit # 90437

Dry-Erase Markers # 90431 (wide)

Whiteboard Cleaner # 90436

Magnetic Eraser # 90435

611 3rd Avenue SW web www.bigboards.com

Carmel, IN 46032

(800) 334-4245

email sales@magneticconcepts.com

(317) 580-4020 fax (317) 580-4024